

FRANZ JÄGER®

Franz Jäger Advanced Digital Lock

FIRE RESISTANT VALUE SAFES INSTRUCTION

Products

Franz Jäger Bransikre Verdiskap

Franz Jäger Kassaskåp

Installation of the safe

Before installing the safe make sure that the floor bearing capacity is sufficient. The safe must be placed on flat surface. Make sure that the door does not turn by itself in any position. Please note opening space requirement 120 degrees when the safe is equipped with pull-out internal fittings.

Floor anchoring holes and bolts as standard.

The Digital Lock

FEATURES

MANAGER COMBINATION (Factory set to 1-2-3-4-5-6)

- Add/Remove User
- Enable/Disable Use

USER COMBINATION

- Open Lock
- Change Combination

WRONG TRY PENALTY

- Four (4) consecutive invalid combinations initiates five (5) minute delay period.

LOW BATTERY WARNING

- Repeated LED flashing and beeping during opening indicates battery is low and needs immediate replacement.

AUDIO AND VISUAL SIGNAL

- Double signal - two (2) LED flashes and two (2) beeps - indicates entry is valid or accepted.

- Triple signal - three (3) LED flashes and three (3) beeps - indicates invalid or not accepted.

OPENING THE LOCK

1. Enter valid six (6) digit combination. The lock will signal a valid combination entry with a one signal. Invalid Combination Entry - Lock will signal three (3) times.
2. Within six (6) seconds, turn the handle to the open position if using a swingbolt style lock.
3. Pull door open.

ADD USER

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter Manager Code and HOLD DOWN LAST DIGIT CODE until the lock signals with two sets of double beeps.
2. PRESS 1. Lock signals once.
3. Enter user code twice. The lock signals once after each valid entry.
4. If a mistake is made wait ten (10) seconds and repeat steps 1-3.

CHANGING MANAGER AND USER COMBINATIONS ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter "zero" six times.
 2. Enter your existing six (6) digit combination one times.
 3. Enter your new six (6) digit combination two times.
 4. If a mistake is made wait ten (10) seconds and repeat steps 1-3.
 5. Test lock operation several times before closing the door.
- Valid Combination - One signal after valid six (6) digit combination is entered.
 - Invalid Combination - Triple signal indicates the old combination is still valid.

CAUTION

When selecting a combination do not use birthday or other predictable data that could give correlation between the user and combination. Keep the combination secret.

DISABLE USER (MANAGER ONLY)

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter the manager combination and hold down last digit of combination until the lock signals with two sets of double beeps.
2. Press 2. Lock signals once.
3. User is temporarily disabled. (User combination is saved and will be valid if reinstated.)
4. If a mistake is made wait ten (10) seconds and repeat steps 1-3.

ENABLE USER (MANAGER ONLY)

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter the Manager combination and hold down last digit of combination until the lock signal with two sets of double beeps.
2. Press 1. Lock signals once.
3. User is reinstated.
4. If a mistake is made wait ten (10) seconds and repeat steps 1-3.

DELETE USER (MANAGER ONLY) ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter Manager combination and hold down last digit of combination until the lock signals with two sets of double beeps.
2. Press 3. Lock signals once.
3. User and combination are removed from lock. (Add User feature is still available)
4. If a mistake is made wait ten (10) seconds and repeat steps 1-3.

WRONG TRY PENALTY

- Entry of four (4) consecutive invalid combination starts a five (5) minute delay period.
- LED flashes at three (3) second intervals.
- While the system is in penalty time, removal of the batteries will interrupt the penalty time countdown. Upon reinstallation of the batteries, the EntryPad continues to count down until the 5 minute penalty time period expires.


BATTERY LOW WARNING

- Repeated beeping (8 beeps) during an unlock operation indicates that the battery is low and needs immediate replacement.
- Manufacturer recommends the use of 9-Volt standard alkaline batteries (Duracell or Energizer brands are recommend) replaced annually.

BATTERY REPLACEMENT INSTRUCTION

One 9V alkaline battery is installed in the compartment in the bottom of the entrypad. To replace the battery, pull out the battery compartment first. Follow these steps:

- Release the latch of the battery compartment, by pulling lever downward, See Fig. 2
- Pull out the battery compartment from the bottom of the Entrypad, See Fig. 3
- Take out the battery and replace with a new 9V alkaline battery (Duracell and Energizer Brands are recommended), See Fig. 4
- Put the battery compartment back into the entrypad. Push up the latch of the battery compartment until in snaps closed. Fig. 1

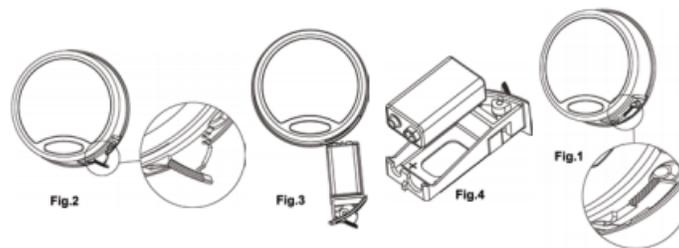

Anchoring of the SAFE

Floor anchoring bolts should be fixed into concrete floor (corresponding anchoring equipment can be used for other floor materials). User of the safe is responsible for the proper anchoring of the safe.

- Install the safe in a place where you can drill 1 or 2 holes
- Check that the drilling spots are safe. Drill 55 mm deep holes into the floor through the bottom holes of the safe. Use an effective impact drilling machine with 15 mm diameter bit

- Use e.g. vacuum cleaner to clean the holes
- Fix the anchors into the holes without bolts. Hit the anchors as deep as possible by hammer and diam. 8-10mm bar
- Screw the bolts as tight as possible
- Fix the plastic cover plugs back.
- If the standard anchoring material not suitable for your ground (e.g. wooden floor), you can use also an equivalent anchoring material suitable for your ground. Diameter, strength class and dimension shall be the same as the supplied anchoring material. In case of any question please consult your dealer or the insurer.