

FRANZ JÄGER®

Franz Jäger Mechanical Lock

Instructions for Products

Franz Jäger Våpenskap

Franz Jäger Vapenskap

Franz Jäger Weapon Cabinet

Franz Jäger EN1143

Important Information:

- The locking mechanism works smoothly. No force should be applied - particularly when inserting the change activator into the lock.
- Using a wrong change activator with the lock (e.g. use of activator of 4-wheel combination lock for 3-wheel combination lock or vice versa) can result in damage to the lock.
- Never grease, oil or spray the lock.
- The lock may only be installed by specialist personnel. Manipulation of any lock parts will lead to invalidation of any warranty claims.
- Security advice: Alter the factory-set combination immediately to your own personal code. Do not use any personal or other similarly well-known data (e.g. birthdays or telephone numbers) when selecting this code. Keep the code in a safe place.
- Always turn the dial slowly and carefully. You can stop the turning as often as you want to. Stop the last turn when the code is exactly lined-up on the Opening Index. If you turn past a number in the combination while dialing, do not turn the dial backwards. You must redial the entire combination. **Do not apply any force!**

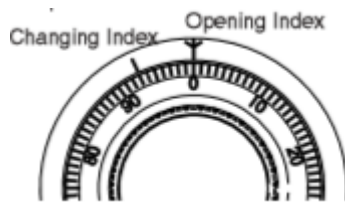


Fig. 1: Dial

B. Opening the lock - using the Opening Index:

The lock comes with the factory-set combination: 50

Turn the dial LEFT passing 50 three times, stop the fourth time

Turn the dial to the RIGHT to open the lock. The lock bolt is fully retracted when the dial no longer turns right.

C. Locking the lock:

To lock the combination lock, turn the dial four complete rotations to the LEFT.

D. Change the combination - using the Changing Index:

To change the combination, you must first open the safe door and lock the lock (bolt fully extended) in open position. Dial the existing combination using the Changing Index, e.g. 50 (if another code is chosen, dial the corresponding numbers).

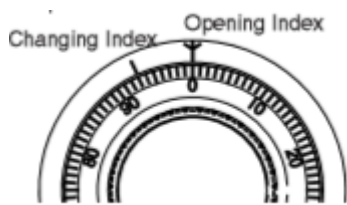


Fig. 1: Dial



Fig. 2: Change activator



Fig. 3: Change label

Insert the change activator with the long side into the activator hole at the inner door. Turn the change activator approx. 90° to the RIGHT until it stops.

If the change label (see Fig. 3) is used, the positions of the change activator are easy to recognize. If the change activator cannot be turned, a mistake was made in entering the code on the Changing Index. Remove the change activator and redial the existing combination using the Changing Index. Do not apply any force!

After turning the change activator until it stops, a new combination can be set. The numbers of the new combination should be at least 4 increments apart from each other. Your new code should be between 20 and 90!

If your new code should be 20-45-80, the example would be:

4 x Turn the dial LEFT passing the first number in the combination "25" three times. Then stop exactly on the number "25" the fourth time (**stop at the Changing index!**).

3 x Turn the dial RIGHT passing the next number in the combination "45" twice. Then stop exactly on the number "45" the third time (**stop at the Changing index!**).

2 x Turn the dial LEFT passing the last number in the combination "80" one time. Then stop exactly on the number "80" the second time (**stop at the Changing index!**).

If you dial past the number where you were supposed to stop, you cannot reverse the dial to correct. The opening procedure must be repeated from the beginning.

After the code has been set, turn the change activator approx. 90° to the LEFT until it stops and remove the change activator. The new combination has been set. To test, dial the new combination using the **Opening Index**. Always perform this test with the safe door open! Test several times before closing the safe door.